
Derating Factor – Settings in ElmLne

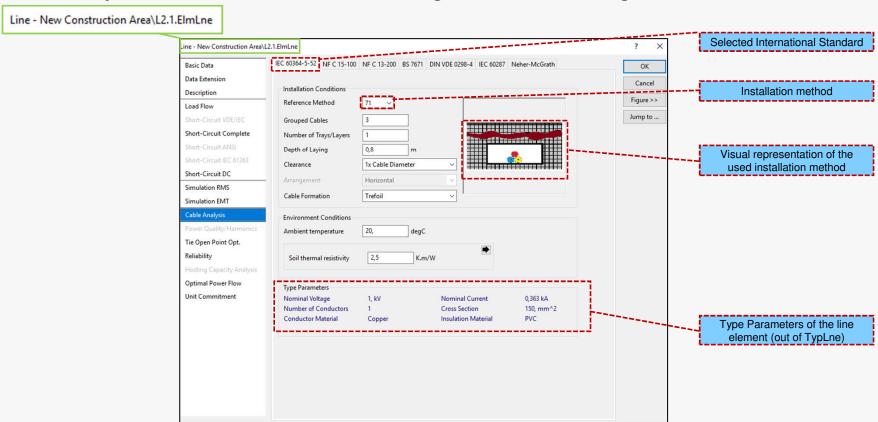

Necessary for the calculation of the Derating Factor considering the installation conditions



Cable Sizing 1